## Configuring the Scale Ports in Electron and the Scale weight reading in a Scale Ticket

Note: The same configuration must be done on multiple instances of i21 Electron within the Network.

• If you have a running existing Scale service, you need to turn off the service for this to work.

Make sure you have i21 Electron installed and then log into i21.

## Open the Physical Scale screen from the i21 menu - Ticket Management > Physical Scales.

Setup the Physical Scale. In this screen, configure the Motion Detection, Weight and Check Date/Time. If you have a running Scale Service, there is no need to change the setup.

Note: this is connected to the scale device setup.

Physical Scale		^ □ X
New Save Search Delete Undo C	lose	
Details		
Physical Equipment ID *	1 Connection Type	Database
Description Scale 1		
Weight Stability Check Single	✓ NTEP Capacity	220,000
File Connection Type		
Filename		
Path		
Motion Detection	Weight	Check Date/Time
Enabled 🗸		Enabled 🗸
Starting Column 1	Starting Column 3	Starting Column 19
Field Length 3	Field Length 6	Field Length 14
Motion ( Character		
Test Motion	Weight	Date Check
? 🔘 🍚 1.4s Ready	I₫ 4 Page	1 of 1 🕨 🕅 📿 Refresh

Open the Scale Station Setting screen from Ticket Management menu > Scale Station Settings.

Under the General / Hardware tab > Hardware panel, make sure the selected Physical Equipment ID is selected.

Scale Station Settings							^		x
New Save Search Delete	Undo Close								
Station ID FWA		Description Fort Way	ne					Active	~
General / Hardware Optio	ns Defaults Email Prin	ting Attachments Auc	dit Log Activities						
Ticket Pool * 01				$\sim$	Setup				
Working Location * 0001 - F	ort Wayne			$\sim$	Allow Manual Tickets				
Interface Type Standa	rd		$\sim$	Last Weigher	IRELY ADMIN				
Search Address Enter a	ddress to search			Scale Processing	Real Time			~	
Address			0	Site Manager					
				$\mathscr{P}$ Test Connection					
City		State			Host				
Zip/Postal		Country			Port				
Phone					Protocol				~
Hardware					Logon Type				~
Scale ID 1	Scale 1 v S	cale ID 2	Scale 2	~	User				
Scale ID 3	Physical Equipment ID		Description						
Scale UOM	1		Scale 1						
Disable Scale 1	2		Scale 2						
Disable Scale 3	3		scale 3						
Multiple Weights									
Allow Zero Tare Weights									
Grader 1 ID									
Grader 2 ID	~								
? 🔘 🖓 1.97s Ready	,					Page 1 of	1 🕨 🕨	∫ ∂ Re	fresh

Once you are done, select the File menu and click i21 Scale Ports.

## Click the Add button.

i2	i21 Scale Ports X											
	#	Port	P.E. ID	Device Type	Handshake	Baud Rate	Parity	Data Bits	Stop Bits	Action		
						No records found						
									Add	Close		

Configure the i21 Scale Port.

Port - enter the 3rd COM Port from the starting COM. For example, if the Starting COM selected is COM10, your port here is COM12.
Physical Equipment ID - enter the Physical Equipment ID of your Physical Scale.
Handshake - select X0nX0ff

Click Save.

i21 Scale Port			x
Port	Physical Equipment ID	Device Type	
COM12	1	Scale	•
Handshake	Baud Rate	Parity	
XOnXOff	▼ 9600	None	•
Data Bits	Stop Bits		
8	• 1	Ŧ	
		Sa	ave Cancel

This will bring you to the i21 Home page.

## Check if Scale Head is getting the same weights on different computers:

• From the Ticket Management menu, select Tickets, click Station.

Note: make sure the correct Scale Station is selected.

- Click New to create a Scale Ticket
- Initial loading of the new Ticket screen, no scale reading is showing up in Scale head.

Ticket - FWA - (SC	T-2383)							^		2	×
New Save Dele	te <b>Undo</b> Contract l	.oad Sales Print L			PE Receipt Close						
Details Attachn	nents Audit Log Act	ivities					Scale 1 : No NTEP C	apacity			0
Ticket No	SCT-2383	Driver		~	Scale Options		Gross (F3)			<b>0</b> Ib	
Туре	<u> </u>	Truck ld		~	monster scale	10/03/20	Tare (F4)				
Entity		Reference		~	Freight Per Unit	0.000	Wight Details				0
ltem	Q				Deduct from Vendor		Tare Weight				0
Distribution					Hauler	~	Net Weight				0
Location	0001 - Fort Wayne				Fees	0.000	Gross Units			(	5
Stor. Location	~	Pit			Deduct Fees from Entity		Shrink Units				5
Storage Unit	~				Futures	0.000	Net Units				51
Plate No.					Basis	0.000					
					Farm/Field	~	Trucks in Yard				\$
Comments					Grades	~	Export - BV	iew - Filte	r (F3)	×	2
Grades / Peadin	ac A	Split Dotails			Weights	~	FICKET NO. Type	Entity Nan	Loc	Status	3
Dia con Calant	gs o	Split			Driver On	$\checkmark$	SCI-2379 Load Out	AT Port	000	-	
Discount Schedu		Split			Scale Operator	IRELY AD 🗸	1357 Load In	A & A C	000	0	-
Comment		Export - 🔡 View -	Filter (F3)	×			1356 Load In	Adept	000	0	_
Export - 🔠 Viev	w ▼ Filter (F3) ×	Entity	Percent D	Dist			SCT-2373 Load In		000	0	
Discount Code	Reading Discount						SCT-2370 Load In		000	0	
							1355 Load In	Adept	000	0	
							1354 Load In	A1 Port	000	0	
							1351 Load In	A1 Port	000	R	-
4		4					1349 Load In	Cintas	000	0	
?	's Edited								( K	Refre	esh

• Tune the scale device simulator to get the Scale Weight reading. This will appear in Scale Ticket screen.



Use the hot key (F3) or click the Gross button to get the Scale weight to display it in Gross Weight field.

Ticket - FWA - (SCT-2383	)								×
New Save Delete Ur	ndo Contract L	oad Sales Print	Distribute Undi			Close			
Details Attachments	Audit Log Acti	vities					Scale 1 : No NTEP	apacity	0
Ticket No SCT-2	383	Driver		~	Scale Options		Gross (F3)	666	80 њ
Type Load	In v	Truck Id		$\sim$	monster scale	10/03/20	Tare (F4)		
Vendor A1 Pc	ortal Farms, In 🔍	Reference		$\sim$	Freight Per Unit	0.000	- Weight Details		66 680
Item CORN	1 Q,				Deduct from Vendor		Tare Weight		0
Distribution Open	Storage 🗸 🗸				Hauler	~	Net Weight		66,680
Location 0001	- Fort Wayne 🗸				Fees	0.000	Gross Units	1190.714	3 Bushels
Stor. Location	~	Pit			Deduct Fees from Vendor		Shrink Units	8.33	5 Bushels
Storage Unit	~				Futures	0.000	Net Units	1182.379	3 Bushels
Plate No.					Basis	0.000	Trucks in Yard		z
Commonts					Storage Schedule	Corn Sto 🗸	C Export - B	/iew - Filter (F3)	× 5
comments					Farm/Field	~	Ticket No. Type	Entity Nan Loc	Status
Grades / Readings	Ô	Split Details			Weights	×	SCT-2379 Load Ou	A1 Port 000.	0 🔺
Discount Schedule 1	~	Split		~	Delivery Sheets	· ·	1357 Load In	A & A C 000.	0
Comment		Export - 🔠 Viev	v - Filter (F3)	×	Driver On	✓	1356 Load In	Adept 000.	
Commodity Grade	~	Entity	Percent	Dist	Scale Operator	IRELY AD 🗸	SCT-2373 Load In	000.	
Export 🗸 🔡 View 🗸 🖡	ilter (F3) 🗙						SCT-2370 Load In	000.	0
Discount Code Reading	g Discount						1355 Load In	Adept 000.	0
Corn Test We 0	0.66						1354 Load In	A1 Port 000.	0
Corn Moisture 15	0.02						1351 Load In	A1 Port 000.	R
Corn Damage 1	0.01						1349 Load In	Cintas 000.	
? 🛈 🖓 2.27s Sa	aved						I		C Refresh

Tune the scale device simulator again to get the scale weight reading for Tare Weight.



This will appear in Scale Ticket screen.

Use the hot key (F4) or click the Tare button to get the Scale weight to display it in Tare Weight field.

Ticket - FWA - (SC	T-2383)						^		×
New Save Dele	te Undo Contract Lo	oad Sales Print Distr	<b>ibute</b> Undistribu		Close				
Details Attachn	nents Audit Log Acti	vities				Scale 1 : No NTEP	Capacity		0
Ticket No	SCT-2383	Driver	~	Scale Options		Gross (F3)	3	334(	Ъ
Туре	Load In 🗸	Truck Id	~	monster scale	10/03/20	Tare (F4)			
Vendor	A1 Portal Farms, In Q	Reference	~	Freight Per Unit	0.000	Gross Weight		6	6 680
ltem	CORN Q			Deduct from Vendor		Tare Weight		3	3.340
Distribution	Open Storage 🗸 🗸			Hauler	~	Net Weight		3	3,340
Location	0001 - Fort Wayne 🗸			Fees	0.000	Gross Units	595	5.3571 Bu	shels
Stor. Location	~	Pit		Deduct Fees from Vendor		Shrink Units	Ĺ	4.1675 Bu	ishels
Storage Unit	~			Futures	0.000	Net Units	591	1.1896 Bu	ishels
Plate No.				Basis	0.000	Trucks in Yard			
<i>c</i> .				Storage Schedule	Corn Sto 🗸		View - Filter	r (E3)	× 5
Comments				Farm/Field	~	Ticket No. Type	Entity Nam	Loc St	tatus
Grades / Readin	gs Ö	Split Details		Grades	~	SCT-2379 Load O	ut A1 Port	000 O	, ^
Discount Schedu	ile 1 ~	Split	~	- Weights Delivery Sheets	~	1357 Load In	A & A C	000 O	)
Comment		Export - 🔡 View -	Filter (F3) ×	Driver On	· · ·	1356 Load In	Adept	000 O	)
Commodity Grad	de 🗸 🗸 🗸	Entity	Percent Dist	Scale Operator	IRELY AD 🗸	SCT-2373 Load In		000 O	)
Export - 🔠 Viev	w - Filter (F3) ×					SCT-2370 Load In		000 O	)
Discount Code	Reading Discount					1355 Load In	Adept	000 O	)
Corn Test We	0 0.66					1354 Load In	A1 Port	000 O	,
Corn Moisture	15 0.02					1351 Load In	A1 Port	000 R	
Corn Damage	1 0.01	4				1349 Load In	Cintas	000 O	,
?	's Saved					1		S	Refresh

Note: Getting the Scale Weight reading by pressing the hot keys or clicking on the button will automatically save the scale ticket.