


# Attribute

**Attribute** allows users to configure new attribute and edit the existing ones.

## Accessing Attribute

1. Login into the application
2. Select **Quality**.
3. Click on **Attribute**

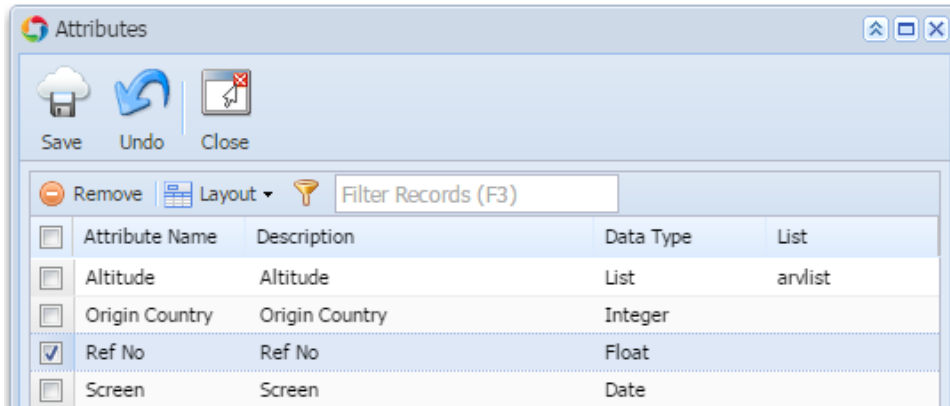

4. Enter the Attribute name
5. Enter the Description
6. Select the Data Type
7. Click on Save