
Lot Quality View

Lot Quality View allows users to view the Sample details of particular Lot.

Accessing Lot Quality View

- 1. Login into the application
- 2. Select Quality.
- 3. Click on Lot Quality View

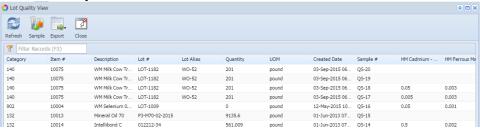

- 4. System will display all the Lot sample details
- 5. To view particular sample details.
- 6. Select the one record and Click on Sample button.